

Obsolete



OPALINE GLASS PENDANT

REF L2160

DIMENSIONS 15.5" DIA X 18"H X 41"H OVERALL
CANOPY: 5.5" DIA
MOUNTING HARDWARE INCLUDED

WEIGHT 15 LBS

VOLTAGE 220



LAMPING (2) 40-60 WATT E26 BULBS
BULBS NOT INCLUDED

LEAD TIME 4-6 WEEKS

FINISH PATINATED BRASS

MADE IN ITALY WITH PATINA APPLIED BY HAND.
FINISH WILL VARY FROM PIECE TO PIECE.
THIS FIXTURE COMES WITH EU WIRING AND IS NOT UL LISTED.
REQUIRES ASSEMBLY.


Obsolete

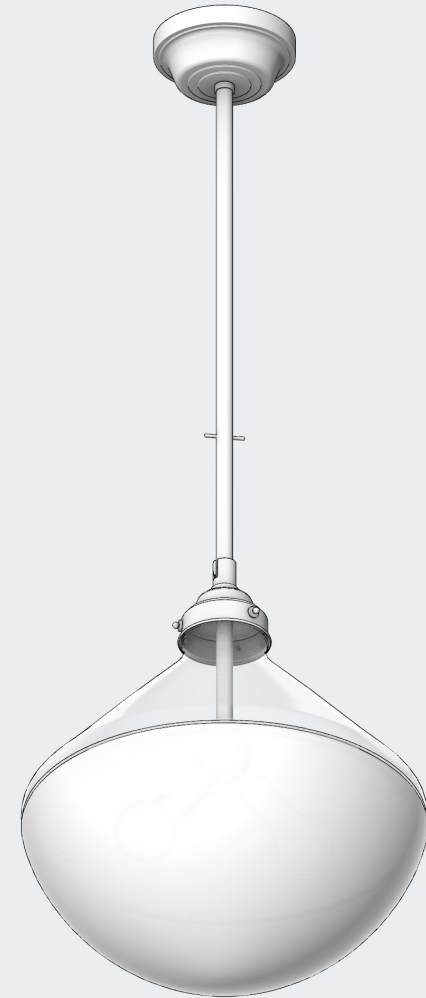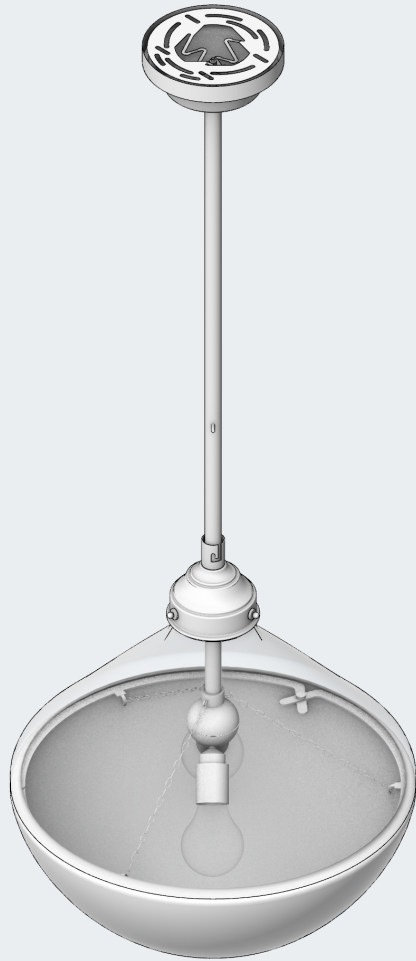


Obsolete



STEP 1:
SECURE LIGHT FIXTURE TO CEILING
(DO NOT INSTALL GLASS OR
SOCKETS YET)

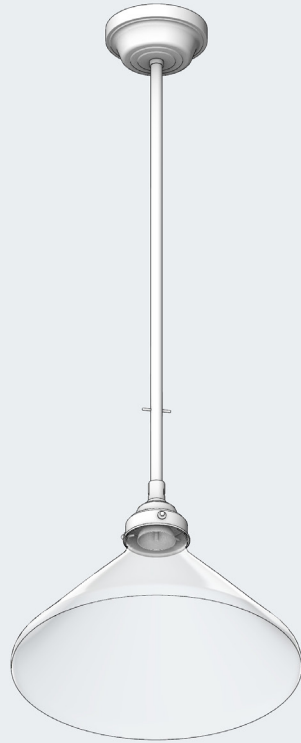

STEP 2:
WHILE THE SOCKET IS STILL
UNINSTALLED, SECURE THE CLEAR
GLASS TO THE BRASS CAP USING THE
PROVIDED FASTENERS.

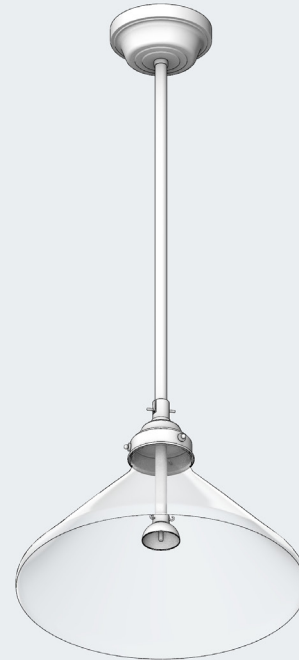

STEP 3:
ONCE CLEAR GLASS IS SECURED, LIFT IT UP
THE ROD AND LOCK THE FITTER + CLEAR
GLASS HIGHER UP ON THE ROD, USING THE
PROTRUDING PIECES OF BRASS.




STEP 4:
COMPLETE INSTALLATION OF SOCKET.

ASSEMBLY INSTRUCTIONS

Obsolete



STEP 5:
ADD CHAIN TO HOOKS ABOVE SOCKET.

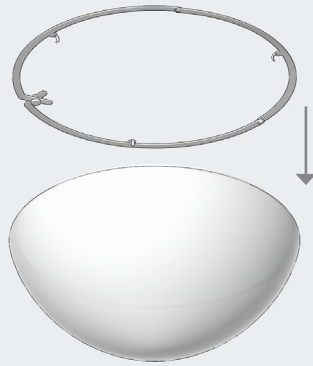

STEP 6:
INSTALL METAL DISC ON THE INSIDE OF
THE WHITE GLASS, WITH THE HOOKS
FACING AWAY FROM THE OPENING /
POINTING DOWNWARDS.



STEP 7:
CONNECT THE LOOSE PIECES OF CHAIN
TO THE CORRESPONDING HOOKS ON THE
METAL RING. THIS GLASS SHOULD NOW BE
SUPPORTED BY THE CHAIN CONNECTED
ABOVE THE SOCKET.



STEP 8:
GENTLY LOWER THE CLEAR GLASS SO
IT'S RESTING ON TOP OF THE WHITE
GLASS.

ASSEMBLY INSTRUCTIONS